PIC16F87X

EEPROM Memory Programming Specification

This document includes the programming specifications for the following devices:

- PIC16F870
- PIC16F871
- PIC16F872
- PIC16F873
- PIC16F874
- PIC16F876
- PIC16F877

1.0 PROGRAMMING THE PIC16F87X

The PIC16F87X is programmed using a serial method. The serial mode will allow the PIC16F87X to be programmed while in the user's system. This allows for increased design flexibility. This programming specification applies to PIC16F87X devices in all packages.
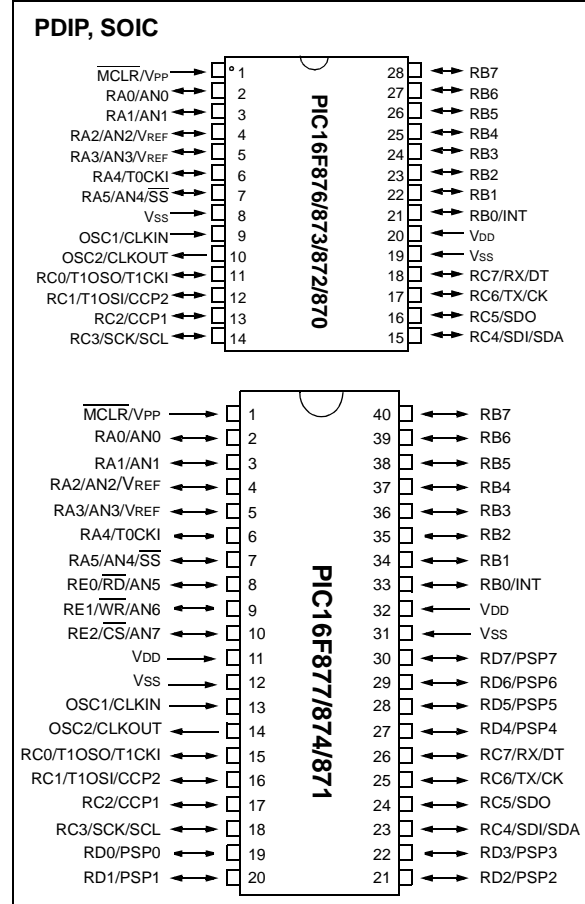
1.1 Programming Algorithm Requirements

The programming algorithm used depends on the operating voltage (VDD) of the PIC16F87X device. Algorithm 1 is designed for a VDD range of $2.2V \leq VDD < 5.5V$. Algorithm 2 is for a range of $4.5V \leq VDD \leq 5.5V$. Either algorithm can be used with the two available programming entry methods. The first method follows the normal Microchip programming mode entry of applying a VPP voltage of $13V \pm .5V$. The second method, called Low Voltage ICSP™ or LVP for short, applies VDD to $\overline{MCLR}$ and uses the I/O pin RB3 to enter programming mode. When RB3 is driven to VDD from ground, the PIC16F87X device enters programming mode.

1.2 Programming Mode

The programming mode for the PIC16F87X allows programming of user program memory, data memory, special locations used for ID, and the configuration word.

Pin Diagram

PDIP, SOIC

PIC16F876/873/872/870

Pin	Signal		Pin	Signal
1	$\overline{MCLR}$/VPP		28	RB7
2	RA0/AN0		27	RB6
3	RA1/AN1		26	RB5
4	RA2/AN2/VREF		25	RB4
5	RA3/AN3/VREF		24	RB3
6	RA4/T0CKI		23	RB2
7	RA5/AN4/$\overline{SS}$		22	RB1
8	VSS		21	RB0/INT
9	OSC1/CLKIN		20	VDD
10	OSC2/CLKOUT		19	VSS
11	RC0/T1OSO/T1CKI		18	RC7/RX/DT
12	RC1/T1OSI/CCP2		17	RC6/TX/CK
13	RC2/CCP1		16	RC5/SDO
14	RC3/SCK/SCL		15	RC4/SDI/SDA

PIC16F877/874/871

Pin	Signal		Pin	Signal
1	$\overline{MCLR}$/VPP		40	RB7
2	RA0/AN0		39	RB6
3	RA1/AN1		38	RB5
4	RA2/AN2/VREF		37	RB4
5	RA3/AN3/VREF		36	RB3
6	RA4/T0CKI		35	RB2
7	RA5/AN4/$\overline{SS}$		34	RB1
8	RE0/$\overline{RD}$/AN5		33	RB0/INT
9	RE1/$\overline{WR}$/AN6		32	VDD
10	RE2/$\overline{CS}$/AN7		31	VSS
11	VDD		30	RD7/PSP7
12	VSS		29	RD6/PSP6
13	OSC1/CLKIN		28	RD5/PSP5
14	OSC2/CLKOUT		27	RD4/PSP4
15	RC0/T1OSO/T1CKI		26	RC7/RX/DT
16	RC1/T1OSI/CCP2		25	RC6/TX/CK
17	RC2/CCP1		24	RC5/SDO
18	RC3/SCK/SCL		23	RC4/SDI/SDA
19	RD0/PSP0		22	RD3/PSP3
20	RD1/PSP1		21	RD2/PSP2

In-circuit Serial Programming (ICSP) is a trademark of Microchip Technology Inc.

PIC16F87X

PIN DESCRIPTIONS (DURING PROGRAMMING): PIC16F87X

Pin Name	During Programming		
	Function	Pin Type	Pin Description
RB3	PGM	I	Low voltage ICSP programming input if LVP configuration bit equals 1
RB6	CLOCK	I	Clock input
RB7	DATA	I/O	Data input/output
MCLR	VTEST MODE	P*	Program Mode Select
VDD	VDD	P	Power Supply
VSS	VSS	P	Ground

Legend: I = Input, O = Output, P = Power

*In the PIC16F87X, the programming high voltage is internally generated. To activate the programming mode, high voltage needs to be applied to MCLR input. Since the MCLR is used for a level source, this means that MCLR does not draw any significant current.

2.0   PROGRAM MODE ENTRY

2.1   User Program Memory Map

The user memory space extends from 0x0000 to 0x1FFF (8K). In programming mode, the program memory space extends from 0x0000 to 0x3FFF, with the first half (0x0000-0x1FFF) being user program memory and the second half (0x2000-0x3FFF) being configuration memory. The PC will increment from 0x0000 to 0x1FFF and wrap to 0x0000, 0x2000 to 0x3FFF and wrap around to 0x2000 (not to 0x0000). Once in configuration memory, the highest bit of the PC stays a '1', thus always pointing to the configuration memory. The only way to point to user program memory is to reset the part and reenter program/verify mode as described in Section 2.4.

In the configuration memory space, 0x2000-0x200F are physically implemented. However, only locations 0x2000 through 0x2007 are available. Other locations are reserved. Locations beyond 0x200F will physically access user memory (See Figure 2-1).

2.2   Data EEPROM Memory

The EEPROM data memory space is a separate block of high endurance memory that the user accesses using a special sequence of instructions. The amount of data EEPROM memory depends on the device and is shown below in number of bytes.

Device	# of Bytes
PIC16F870	64
PIC16F871	64
PIC16F872	64
PIC16F873	128
PIC16F874	128
PIC16F876	256
PIC16F877	256

The contents of data EEPROM memory have the capability to be embedded into the hex file.

The programmer should be able to read data EEPROM information from a hex file and conversely (as an option), write data EEPROM contents to a hex file along with program memory information and configuration bit information.

The 256 data memory locations are logically mapped starting at address 0x2100. The format for data memory storage is one data byte per address location, LSB aligned.

PIC16F87X

2.3 ID Locations

A user may store identification information (ID) in four ID locations. The ID locations are mapped in [0x2000 : 0x2003]. It is recommended that the user use only the four least significant bits of each ID location. In some devices, the ID locations read-out in an unscrambled fashion after code protection is enabled. For these devices, it is recommended that ID location is written as "11 1111 1000 bbbb" where 'bbbb' is ID information.

In other devices, the ID locations read out normally, even after code protection. To understand how the devices behave, refer to Table 5-1.

To understand the scrambling mechanism after code protection, refer to Section 4.0.

FIGURE 2-1: PROGRAM MEMORY MAPPING

© 2000 Microchip Technology Inc.
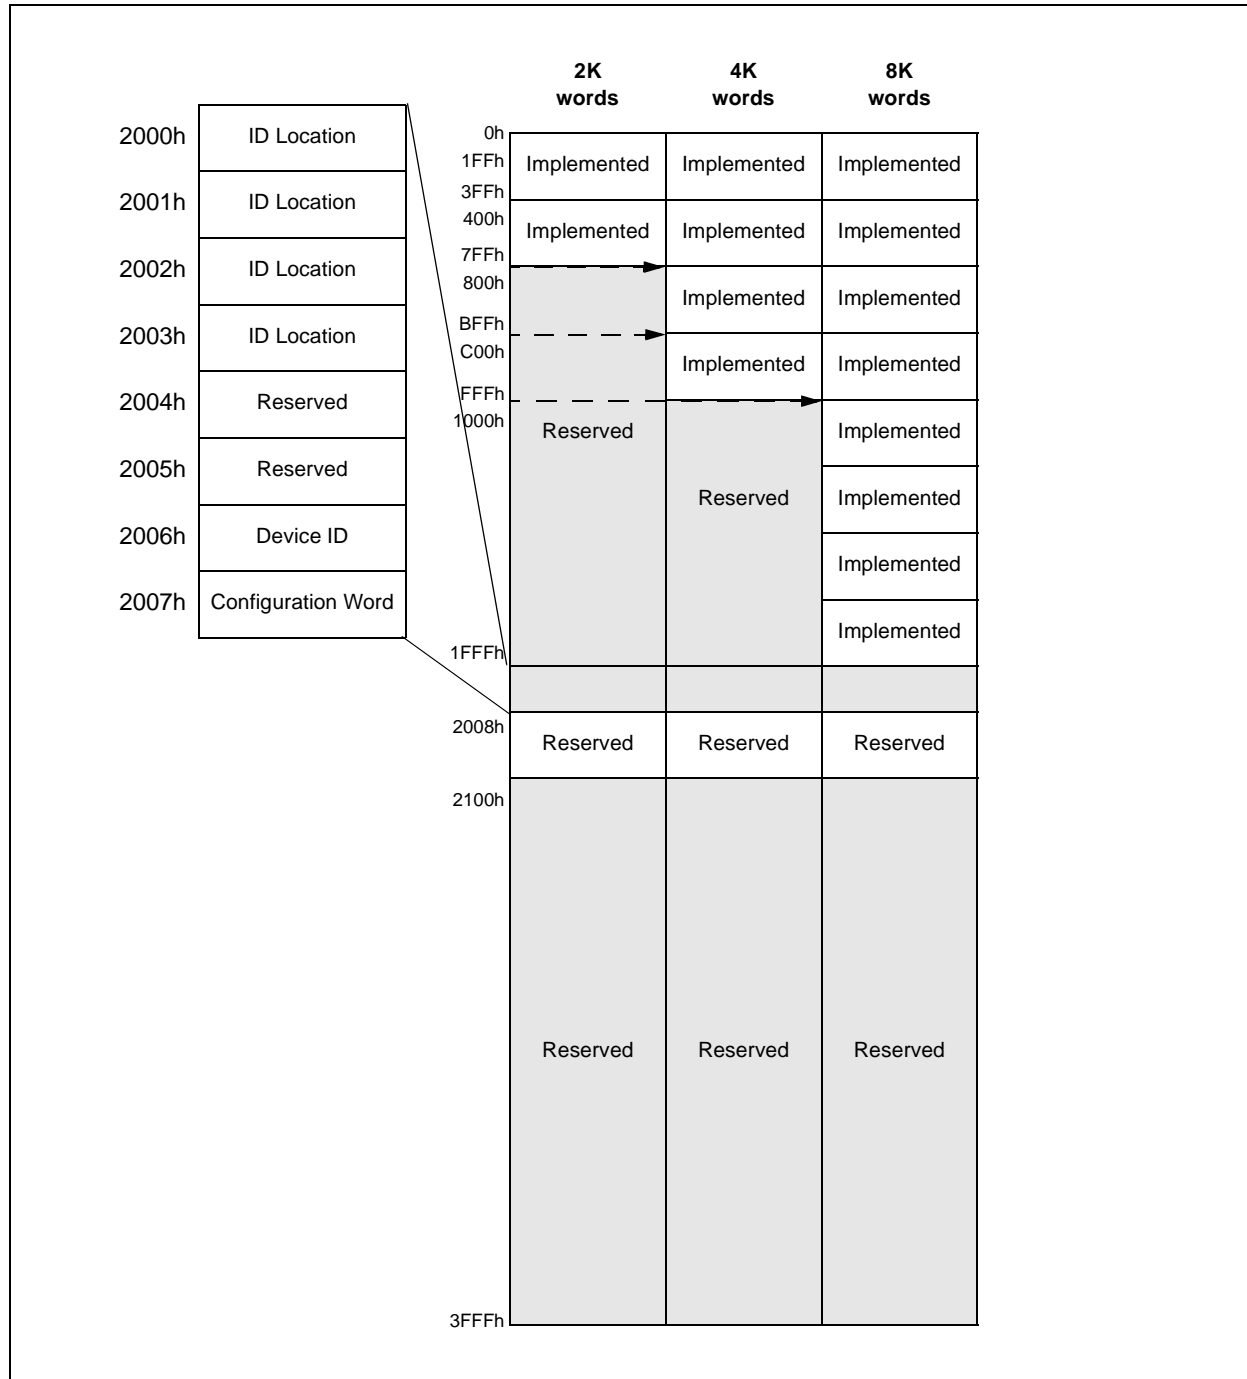
2.4   Program/Verify Mode

The program/verify mode is entered by holding pins RB6 and RB7 low while raising $\overline{MCLR}$ pin from V$_{IL}$ to V$_{IHH}$ (high voltage). In this mode, the state of the RB3 pin does not effect programming. Low voltage ICSP programming mode is entered by raising RB3 from V$_{IL}$ to V$_{DD}$ and then applying V$_{DD}$ to $\overline{MCLR}$. Once in this mode, the user program memory and the configuration memory can be accessed and programmed in serial fashion. The mode of operation is serial, and the memory that is accessed is the user program memory. RB6 and RB7 are Schmitt Trigger Inputs in this mode.

> **Note:** The OSC must not have 72 osc clocks while the device $\overline{MCLR}$ is between V$_{IL}$ and V$_{IHH}$.

The sequence that enters the device into the programming/verify mode places all other logic into the RESET state (the $\overline{MCLR}$ pin was initially at V$_{IL}$). This means that all I/O are in the RESET state (high impedance inputs).

The normal sequence for programming is to use the load data command to set a value to be written at the selected address. Issue the begin programming command followed by read data command to verify, and then increment the address.

A device RESET will clear the PC and set the address to 0. The "increment address" command will increment the PC. The "load configuration" command will set the PC to 0x2000. The available commands are shown in Table 2-1.

2.4.1   LOW VOLTAGE ICSP PROGRAMMING MODE

Low voltage ICSP programming mode allows a PIC16F87X device to be programmed using V$_{DD}$ only. However, when this mode is enabled by a configuration bit (LVP), the PIC16F87X device dedicates RB3 to control entry/exit into programming mode.

When LVP bit is set to '1', the low voltage ICSP programming entry is enabled. Since the LVP configuration bit allows low voltage ICSP programming entry in its erased state, an erased device will have the LVP bit enabled at the factory. While LVP is '1', RB3 is dedicated to low voltage ICSP programming. Bring RB3 to V$_{DD}$ and then $\overline{MCLR}$ to V$_{DD}$ to enter programming mode. All other specifications for high voltage ICSP™ apply.

To disable low voltage ICSP mode, the LVP bit must be programmed to '0'. This must be done while entered with high voltage entry mode (LVP bit = 1). RB3 is now a general purpose I/O pin.

2.4.2   SERIAL PROGRAM/VERIFY OPERATION

The RB6 pin is used as a clock input pin, and the RB7 pin is used for entering command bits and data input/output during serial operation. To input a command, the clock pin (RB6) is cycled six times. Each command bit is latched on the falling edge of the clock with the least significant bit (LSb) of the command being input first. The data on pin RB7 is required to have a minimum setup and hold time (see AC/DC specifications), with respect to the falling edge of the clock. Commands that have data associated with them (read and load) are specified to have a minimum delay of 1 μs between the command and the data. After this delay, the clock pin is cycled 16 times with the first cycle being a Start bit and the last cycle being a Stop bit. Data is also input and output LSb first.

Therefore, during a read operation the LSb will be transmitted onto pin RB7 on the rising edge of the second cycle, and during a load operation the LSb will be latched on the falling edge of the second cycle. A minimum 1μs delay is also specified between consecutive commands.

All commands are transmitted LSb first. Data words are also transmitted LSb first. The data is transmitted on the rising edge and latched on the falling edge of the clock. To allow for decoding of commands and reversal of data pin configuration, a time separation of at least 1 μs is required between a command and a data word (or another command).

The commands that are available are:

2.4.2.1   LOAD CONFIGURATION

After receiving this command, the program counter (PC) will be set to 0x2000. By then applying 16 cycles to the clock pin, the chip will load 14-bits in a "data word," as described above, to be programmed into the configuration memory. A description of the memory mapping schemes of the program memory for normal operation and configuration mode operation is shown in Figure 2-1. After the configuration memory is entered, the only way to get back to the user program memory is to exit the program/verify test mode by taking $\overline{MCLR}$ low (V$_{IL}$).

2.4.2.2   LOAD DATA FOR PROGRAM MEMORY

After receiving this command, the chip will load in a 14-bit "data word" when 16 cycles are applied, as described previously. A timing diagram for the load data command is shown in Figure 6-1.

PIC16F87X

2.4.2.3 LOAD DATA FOR DATA MEMORY

After receiving this command, the chip will load in a 14-bit "data word" when 16 cycles are applied. However, the data memory is only 8-bits wide, and thus only the first 8-bits of data after the Start bit will be programmed into the data memory. It is still necessary to cycle the clock the full 16 cycles in order to allow the internal circuitry to reset properly. The data memory contains up to 256 bytes. If the device is code protected, the data is read as all zeros.

2.4.2.4 READ DATA FROM PROGRAM MEMORY

After receiving this command, the chip will transmit data bits out of the program memory (user or configuration) currently accessed, starting with the second rising edge of the clock input. The RB7 pin will go into output mode on the second rising clock edge, and it will revert back to input mode (hi-impedance) after the 16th rising edge. A timing diagram of this command is shown in Figure 6-2.

2.4.2.5 READ DATA FROM DATA MEMORY

After receiving this command, the chip will transmit data bits out of the data memory starting with the second rising edge of the clock input. The RB7 pin will go into output mode on the second rising edge, and it will revert back to input mode (hi-impedance) after the 16th rising edge. As previously stated, the data memory is 8-bits wide, and therefore, only the first 8-bits that are output are actual data.

2.4.2.6 INCREMENT ADDRESS

The PC is incremented when this command is received. A timing diagram of this command is shown in Figure 6-3.

2.4.2.7 BEGIN ERASE/PROGRAM CYCLE

A load command must be given before every begin programming command. Programming of the appropriate memory (test program memory, user program memory or data memory) will begin after this command is received and decoded. An internal timing mechanism executes an erase before write. The user must allow for both erase and programming cycle times for programming to complete. No "end programming" command is required.

2.4.2.8 BEGIN PROGRAMMING

> **Note:** The Begin Program operation must take place at 4.5 to 5.5 VDD range.

A load command must be given before every begin programming command. Programming of the appropriate memory (test program memory, user program memory or data memory) will begin after this command is received and decoded. An internal timing mechanism executes a write. The user must allow for program cycle time for programming to complete. No "end programming" command is required.

This command is similar to the ERASE/PROGRAM CYCLE command, except that a word erase is not done. It is recommended that a bulk erase be performed before starting a series of programming only cycles.

TABLE 2-1: COMMAND MAPPING FOR PIC16F87X

Command	Mapping (MSB … LSB)						Data	Voltage Range
Load Configuration	X	X	0	0	0	0	0, data (14), 0	2.2V - 5.5V
Load Data for Program Memory	X	X	0	0	1	0	0, data (14), 0	2.2V - 5.5V
Read Data from Program Memory	X	X	0	1	0	0	0, data (14), 0	2.2V - 5.5V
Increment Address	X	X	0	1	1	0		2.2V - 5.5V
Begin Erase Programming Cycle	0	0	1	0	0	0		2.2V - 5.5V
Begin Programming Only Cycle	0	1	1	0	0	0		4.5V - 5.5V
Load Data for Data Memory	X	X	0	0	1	1	0, data (14), 0	2.2V - 5.5V
Read Data from Data Memory	X	X	0	1	0	1	0, data (14), 0	2.2V - 5.5V
Bulk Erase Setup1	0	0	0	0	0	1		4.5V - 5.5V
Bulk Erase Setup2	0	0	0	1	1	1		4.5V - 5.5V

2.5 Erasing Program and Data Memory

Depending on the state of the code protection bits, program and data memory will be erased using different procedures. The first set of procedures is used when both program and data memories are not code protected. The second set of procedures must be used when either memory is code protected. A device programmer should determine the state of the code protection bits and then apply the proper procedure to erase the desired memory.

2.5.1 ERASING NON-CODE PROTECTED PROGRAM AND DATA MEMORY

When both program and data memories are not code protected, they must be individually erased using the following procedures. The only way that both memories are erased using a single procedure is if code protection is enabled for one of the memories. These procedures do not erase the configuration word or ID locations.

Procedure to bulk erase program memory:

1. Execute a Load Data for Program Memory command (000010) with a '1' in all locations (0x3FFF)
2. Execute a Bulk Erase Setup1 command (000001)
3. Execute a Bulk Erase Setup2 command (000111)
4. Execute a Begin Erase/Programming command (001000)
5. Wait 8ms
6. Execute a Bulk Erase Setup1 command (000001)
7. Execute a Bulk Erase Setup2 command (000111)

Procedure to bulk erase data memory:

1. Execute a Load Data for Data Memory command (000011) with a '1' in all locations (0x3FFF)
2. Execute a Bulk Erase Setup1 command (000001)
3. Execute a Bulk Erase Setup2 command (000111)
4. Execute a Begin Erase/Programming command (001000)
5. Wait 8ms
6. Execute a Bulk Erase Setup1 command (000001)
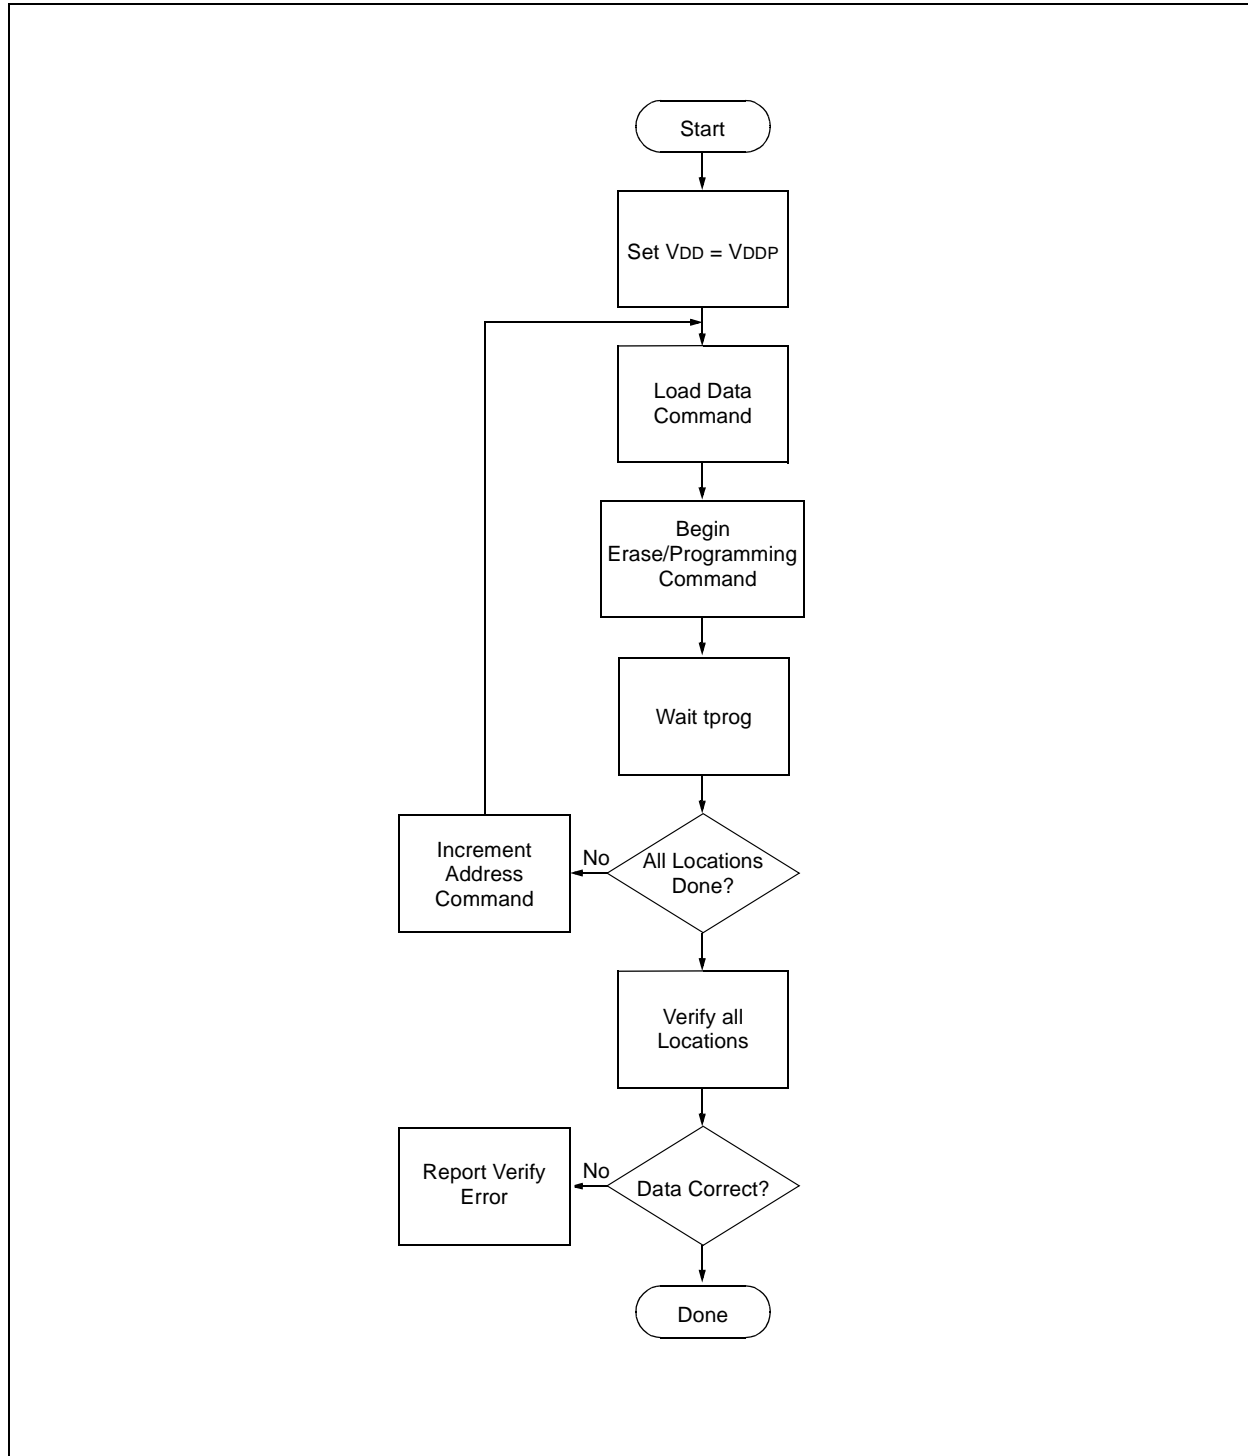7. Execute a Bulk Erase Setup2 command (000111)

2.5.2 ERASING CODE PROTECTED MEMORY

For the PIC16F87X devices, once code protection is enabled, all protected program and data memory locations read all '0's and further programming is disabled. The ID locations and configuration word read out unscrambled and can be reprogrammed normally. The only procedure to erase a PIC16F87X device that is code protected is shown in the following procedure. This method erases program memory, data memory, configuration bits and ID locations. **Since all data within the program and data memory will be erased when this procedure is executed, the security of the data or code is not compromised.**

1. Execute a Load Configuration command (000000) with a '1' in all locations (0x3FFF)
2. Execute Increment Address command (000110) to set address to configuration word location (0x2007)
3. Execute a Bulk Erase Setup1 command (000001)
4. Execute a Bulk Erase Setup2 command (000111)
5. Execute a Begin Erase/Programming command (001000)
6. Wait 8ms
7. Execute a Bulk Erase Setup1 command (000001)
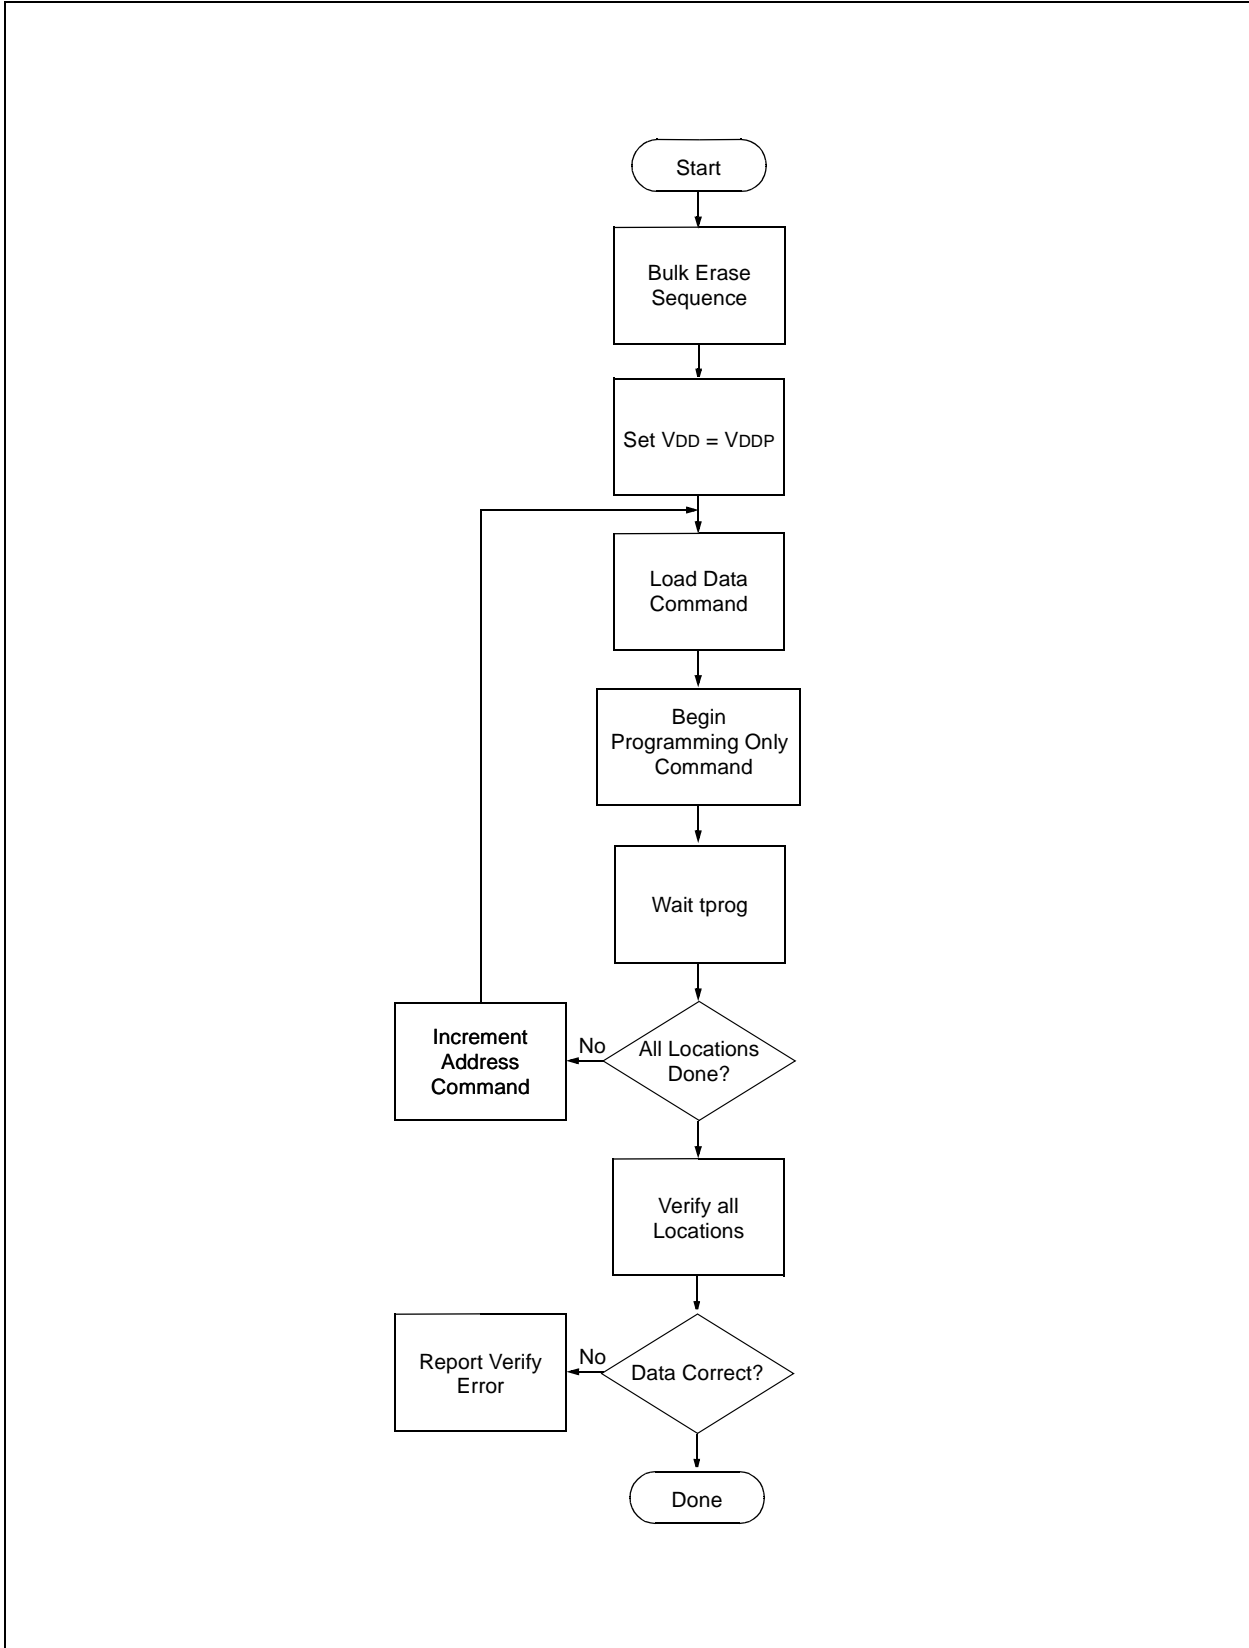8. Execute a Bulk Erase Setup2 command (000111)

PIC16F87X

```
                    ┌─────────┐
                    │  Start  │
                    └────┬────┘
                         │
                ┌────────┴────────┐
                │  Set VDD = VDDP │
                └────────┬────────┘
                         │
         ┌───────────────┤
         │      ┌────────┴────────┐
         │      │   Load Data     │
         │      │   Command       │
         │      └────────┬────────┘
         │               │
         │      ┌────────┴────────┐
         │      │   Begin         │
         │      │ Erase/Programming│
         │      │   Command       │
         │      └────────┬────────┘
         │               │
         │      ┌────────┴────────┐
         │      │   Wait tprog    │
         │      └────────┬────────┘
         │               │
  ┌──────┴──────┐  No  ◇─┴────────◇
  │  Increment  │◄─────│ All Locations│
  │   Address   │      │    Done?     │
  │   Command   │      ◇──────┬───────◇
  └─────────────┘             │
                     ┌────────┴────────┐
                     │   Verify all    │
                     │   Locations     │
                     └────────┬────────┘
                              │
  ┌──────────────┐  No   ◇────┴────◇
  │ Report Verify│◄──────│Data Correct?│
  │    Error     │       ◇─────┬──────◇
  └──────────────┘             │
                          ┌────┴────┐
                          │  Done   │
                          └─────────┘
```

FIGURE 2-3: PROGRAM FLOW CHART - PIC16F87X PROGRAM MEMORY (4.5V $\leq$ VDD $\leq$ 5.5V)

```
                    ( Start )
                       |
              +----------------+
              | Bulk Erase     |
              | Sequence       |
              +----------------+
                       |
              +----------------+
              | Set VDD = VDDP |
              +----------------+
                       |
              +----------------+
              | Load Data      |
              | Command        |
              +----------------+
                       |
              +----------------+
              | Begin          |
              | Programming    |
              | Only Command   |
              +----------------+
                       |
              +----------------+
              | Wait tprog     |
              +----------------+
                       |
   +-----------+   <All Locations
   | Increment |<--No  Done?>
   | Address   |
   | Command   |
   +-----------+       |
              +----------------+
              | Verify all     |
              | Locations      |
              +----------------+
                       |
   +-----------+   <Data Correct?>
   | Report    |<--No
   | Verify    |
   | Error     |       |
   +-----------+    ( Done )
```

PIC16F87X

FIGURE 2-5:   PROGRAM FLOW CHART - PIC16F87X CONFIGURATION MEMORY

```
                                    ┌─────────┐
                                    │  Start  │
                                    └────┬────┘
                                         │
                                    ┌─────────────┐
                                    │   Load      │
                                    │Configuration│
                                    │   Data      │
                                    └─────┬───────┘
                                         │
                          No   ◇ Program ID ◇   Yes   ┌──────────┐   ┌──────────┐
                         ◄─────◇ Location?  ◇────────►│ Program  │──►│Read Data │
                              ◇          ◇            │  Cycle   │   │ Command  │
                                                      └──────────┘   └────┬─────┘
          ┌───────────┐                                                   │
          │ Increment │              ┌────────────┐    No   ◇ Data   ◇    │
          │  Address  │              │  Report    │◄───────◇ Correct?◇◄───┘
          │  Command  │              │Programming │        ◇         ◇
          └─────┬─────┘              │  Failure   │            │ Yes
                │                    └────────────┘
      No  ◇ Address = ◇
     ◄───◇  0x2004?   ◇
         ◇           ◇
              │ Yes
         ┌───────────┐
         │ Increment │
         │  Address  │
         │  Command  │
         └─────┬─────┘
```

PROGRAM CYCLE

Load Data Command
Begin Program Only Command*
Wait tprog

```
         ┌───────────┐
         │ Increment │
         │  Address  │
         │  Command  │
         └─────┬─────┘
         ┌───────────┐                          ┌──────────┐
         │ Increment │                          │ Program  │
         │  Address  │─────────────────────────►│  Cycle   │
         │  Command  │                          │(Config.  │
         └───────────┘                          │  Word)   │
                                                └────┬─────┘
  ┌──────────────┐    No  ◇ Data    ◇   ┌──────────┐
  │Report Program│◄──────◇ Correct? ◇◄──│Read Data │
  │Configutation │       ◇          ◇   │ Command  │
  │ Word Error   │           │ Yes      └──────────┘
  └──────────────┘           │
                        ┌─────────┐
                        │  Done   │
                        └─────────┘
```

*Assumes that a bulk erase was issued before programming configuration word. If not, use the program flow from Figure 2-4.

PIC16F87X

3.0 CONFIGURATION WORD

The PIC16F87X has several configuration bits. These bits can be set (reads '0'), or left unchanged (reads '1'), to select various device configurations.

3.1 Device ID Word

The device ID word for the PIC16F87X is located at 2006h.

TABLE 3-1: DEVICE ID VALUE

Device	Device ID Value	
	Dev	Rev
PIC16F870	00 1101 000	x xxxx
PIC16F871	00 1101 001	x xxxx
PIC16F872	00 1000 111	x xxxx
PIC16F873	00 1001 011	x xxxx
PIC16F874	00 1001 001	x xxxx
PIC16F876	00 1001 111	x xxxx
PIC16F877	00 1001 101	x xxxx

FIGURE 3-1: CONFIGURATION WORD FOR PIC16F873/874/876/877

CP1	CP0	RESV	-	WRT	CPD	LVP	BODEN	CP1	CP0	PWRTE	WDTE	F0SC1	F0SC0

bit13   bit0

Register: CONFIG
Address 2007h

bit 13-12:

bit 11:   **Reserved:** Set to '1' for normal operation

bit 5-4:   **CP1:CP0**: FLASH Program Memory Code Protection bits [2]

       4K Devices:
          11 = Code protection off
          10 = 0F00h to 0FFFh code protected
          01 = 0800h to 0FFFh code protected
          00 = 0000h to 0FFFh code protected

       8K Devices:
          11 = Code protection off
          10 = 1F00h to 1FFFh code protected
          01 = 1000h to 1FFFh code protected
          00 = 0000h to 1FFFh code protected

bit 11:   **Reserved**: Set to '1' for normal operation

bit 10:   **Unimplemented**: Read as '1'

bit 9:   **WRT**: FLASH Program Memory Write Enable
      1 = Unprotected program memory may be written to by EECON control
      0 = Unprotected program memory may not be written to by EECON control

bit 8:   **CPD**: Data EE Memory Code Protection
      1 = Code protection off
      0 = Data EE memory code protected

bit 7:   **LVP**: Low Voltage ICSP Programming Enable bit
      1 = RB3/PGM pin has PGM function, low voltage programming enabled
      0 = RB3 is digital I/O, HV on $\overline{MCLR}$ must be used for programming

bit 6:   **BODEN**: Brown-out Reset Enable bit [1]
      1 = BOR enabled
      0 = BOR disabled

bit 3:   **$\overline{PWRTE}$**: Power-up Timer Enable bit [1]
      1 = PWRT disabled
      0 = PWRT enabled

bit 2:   **WDTE**: Watchdog Timer Enable bit
      1 = WDT enabled
      0 = WDT disabled

bit 1-0:   **FOSC1:FOSC0**: Oscillator Selection bits
      11 = RC oscillator
      10 = HS oscillator
      01 = XT oscillator
      00 = LP oscillator

Note 1: Enabling Brown-out Reset automatically enables Power-up Timer (PWRT) regardless of the value of bit $\overline{PWRTE}$. Ensure the Power-up Timer is enabled any time Brown-out Reset is enabled.

    2: All of the CP1:CP0 pairs have to be given the same value to enable the code protection scheme listed.

FIGURE 3-2:   CONFIGURATION WORD FOR PIC16F870/871/872

CP1	CP0	RESV	-	WRT	CPD	LVP	BODEN	CP1	CP0	$\overline{PWRTE}$	WDTE	F0SC1	F0SC0

Register: CONFIG
Address   2007h

bit13   bit0

bit 13-12:
bit 5-4:   **CP1:CP0**: FLASH Program Memory Code Protection bits **(2)**
      `11` = Code protection off
      `10` = not supported
      `01` = not supported
      `00` = 0000h to 07FFh code protected
bit 11:   **Reserved**: Set to '1' for normal operation
bit 10:   **Unimplemented**: Read as '1'
bit 9:   **WRT**: FLASH Program Memory Write Enable
      `1` = Unprotected program memory may be written to by EECON control
      `0` = Unprotected program memory may not be written to by EECON control
bit 8:   **CPD**: Data EE Memory Code Protection
      `1` = Code protection off
      `0` = Data EE memory code protected

bit 7:   **LVP**: Low Voltage ICSP Programming Enable bit
      `1` = RB3/PGM pin has PGM function, low voltage programming enabled
      `0` = RB3 is digital I/O, HV on $\overline{MCLR}$ must be used for programming

bit 6:   **BODEN**: Brown-out Reset Enable bit **(1)**
      `1` = BOR enabled
      `0` = BOR disabled

bit 3:   **$\overline{PWRTE}$**: Power-up Timer Enable bit **(1)**
      `1` = PWRT disabled
      `0` = PWRT enabled

bit 2:   **WDTE**: Watchdog Timer Enable bit
      `1` = WDT enabled
      `0` = WDT disabled

bit 1-0:   **FOSC1:FOSC0**: Oscillator Selection bits
      `11` = RC oscillator
      `10` = HS oscillator
      `01` = XT oscillator
      `00` = LP oscillator

Note 1:   Enabling Brown-out Reset automatically enables Power-up Timer (PWRT) regardless of the value of bit $\overline{PWRTE}$.
        Ensure the Power-up Timer is enabled any time Brown-out Reset is enabled.
    2:   All of the CP1:CP0 pairs have to be given the same value to enable the code protection scheme listed.

4.0 EMBEDDING CONFIGURATION WORD AND ID INFORMATION IN THE HEX FILE

To allow portability of code, the programmer is required to read the configuration word and ID locations from the hex file when loading the hex file. If configuration word information was not present in the hex file, then a simple warning message may be issued. Similarly, while saving a hex file, configuration word and ID information must be included. An option to not include this information may be provided.

Specifically for the PIC16F87X, the EEPROM data memory should also be embedded in the hex file (see Section 2.2).

Microchip Technology Inc. feels strongly that this feature is important for the benefit of the end customer.

PIC16F87X

5.0   CHECKSUM COMPUTATION

Checksum is calculated by reading the contents of the PIC16F87X memory locations and adding up the opcodes up to the maximum user addressable location, e.g., 0x1FF for the PIC16F87X. Any carry bits exceeding 16-bits are neglected. Finally, the configuration word (appropriately masked) is added to the checksum. Checksum computation for each member of the PIC16F87X devices is shown in Table 5-1.

The checksum is calculated by summing the following:

*   The contents of all program memory locations
*   The configuration word, appropriately masked
*   Masked ID locations (when applicable)

The least significant 16 bits of this sum is the checksum.

The following table describes how to calculate the checksum for each device. Note that the checksum calculation differs depending on the code protect setting. Since the program memory locations read out differently depending on the code protect setting, the table describes how to manipulate the actual program memory values to simulate the values that would be read from a protected device. When calculating a checksum by reading a device, the entire program memory can simply be read and summed. The configuration word and ID locations can always be read.

Note that some older devices have an additional value added in the checksum. This is to maintain compatibility with older device programmer checksums.

TABLE 5-1: CHECKSUM COMPUTATION

Device	Code Protect	Checksum*	Blank Value	0x25E6 at 0 and max address
PIC16F870	OFF	SUM[0x0000:0x07FFF] + CFGW & 0x3BFF	0x33FF	0xFFCD
	ALL	CFGW & 0x3BFF + SUM_ID	0x3FCE	0x0B9C
PIC16F871	OFF	SUM[0x0000:0x07FFF] + CFGW & 0x3BFF	0x33FF	0xFFCD
	ALL	CFGW & 0x3BFF + SUM_ID	0x3FCE	0x0B9C
PIC16F872	OFF	SUM[0x0000:0x07FFF] + CFGW & 0x3BFF	0x33FF	0xFFCD
	ALL	CFGW & 0x3BFF + SUM_ID	0x3FCE	0x0B9C
PIC16F873	OFF	SUM[0x0000:0x0FFF] + CFGW & 0x3BFF	0x2BFF	0xF7CD
	0x0F00 : 0xFFF	SUM[0x0000:0x0EFF] + CFGW & 0x3BFF +SUM_ID	0x48EE	0xFAA3
	0x0800 : 0xFFF	SUM[0x0000:0x07FF] + CFGW & 0x3BFF + SUM_ID	0x3FDE	0xF193
	ALL	CFGW & 0x3BFF + SUM_ID	0x37CE	0x039C
PIC16F874	OFF	SUM[0x0000:0x0FFF] + CFGW & 0x3BFF	0x2BFF	0xF7CD
	0x0F00 : 0xFFF	SUM[0x0000:0x0EFF] + CFGW & 0x3BFF +SUM_ID	0x48EE	0xFAA3
	0x0800 : 0xFFF	SUM[0x0000:0x07FF] + CFGW & 0x3BFF + SUM_ID	0x3FDE	0xF193
	ALL	CFGW & 0x3BFF + SUM_ID	0x37CE	0x039C
PIC16F876	OFF	SUM[0x0000:0x1FFF] + CFGW & 0x3BFF	0x1BFF	0xE7CD
	0x1F00 : 0x1FFF	SUM[0x0000:0x1EFF] + CFGW & 0x3BFF +SUM_ID	0x28EE	0xDAA3
	0x1000 : 0x1FFF	SUM[0x0000:0x0FFF] + CFGW & 0x3BFF + SUM_ID	0x27DE	0xD993
	ALL	CFGW & 0x3BFF + SUM_ID	0x27CE	0xF39C
PIC16F877	OFF	SUM[0x0000:0x1FFF] + CFGW & 0x3BFF	0x1BFF	0xE7CD
	0x1F00 : 0x1FFF	SUM[0x0000:0x1EFF] + CFGW & 0x3BFF +SUM_ID	0x28EE	0xDAA3
	0x1000 : 0x1FFF	SUM[0x0000:0x0FFF] + CFGW & 0x3BFF + SUM_ID	0x27DE	0xD993
	ALL	CFGW & 0x3BFF + SUM_ID	0x27CE	0xF39C

Legend: CFGW = Configuration Word
 SUM[a:b] = [Sum of locations a to b inclusive]
 SUM_ID = ID locations masked by 0xF then made into a 16-bit value with ID0 as the most significant nibble.
 For example, ID0 = 0x1, ID1 = 0x2, ID3 = 0x3, ID4 = 0x4, then SUM_ID = 0x1234
 *Checksum = [Sum of all the individual expressions] **MODULO** [0xFFFF]
 + = Addition
 & = Bitwise AND

PIC16F87X

6.0 PROGRAM/VERIFY MODE ELECTRICAL CHARACTERISTICS

TABLE 6-1: **AC/DC CHARACTERISTICS**
TIMING REQUIREMENTS FOR PROGRAM/VERIFY MODE

Standard Operating Conditions (unless otherwise stated) Operating Temperature: $0°C \leq T_A \leq +70°C$ Operating Voltage: $2.2V \leq V_{DD} \leq 5.5V$						
Characteristics	**Sym**	**Min**	**Typ**	**Max**	**Units**	**Conditions/Comments**
General						
V_{DD} level for Algorithm 1	V_{DD}	2.2		5.5	V	Limited command set (See Table 2-1)
V_{DD} level for Algorithm 2	V_{DD}	4.5		5.5	V	All commands available
High voltage on $\overline{MCLR}$ for high voltage programming entry	V_{IHH}	V_{DD} + 3.5		13.5	V	
Voltage on $\overline{MCLR}$ for low voltage ICSP programming entry	V_{IH}	2.2		5.5	V	
$\overline{MCLR}$ rise time (V_{SS} to V_{HH}) for test mode entry	t_{VHHR}			1.0	µs	
(RB6, RB7) input high level	V_{IH1}	$0.8V_{DD}$			V	Schmitt Trigger input
(RB6, RB7) input low level	V_{IL1}	$0.2V_{DD}$			V	Schmitt Trigger input
RB<7:6> setup time before $\overline{MCLR}\uparrow$	tset0	100			ns	
RB<7:6> hold time after $\overline{MCLR}\uparrow$	thld0	5			µs	
RB3 setup time before $\overline{MCLR}\uparrow$	tset2	100			ns	
Serial Program/Verify						
Data in setup time before clock$\downarrow$	tset1	100			ns	
Data in hold time after clock$\downarrow$	thld1	100			ns	
Data input not driven to next clock input (delay required between command/data or command/command)	tdly1	1.0			µs	
Delay between clock$\downarrow$ to clock$\uparrow$ of next command or data	tdly2	1.0			µs	
Clock$\uparrow$ to data out valid (during read data)	tdly3	80			ns	
Erase cycle time	tera		2	4	ms	
Programming cycle time	tprog		2	4	ms	

FIGURE 6-1: LOAD DATA COMMAND $\overline{MCLR}$ = V$_{IHH}$ (PROGRAM/VERIFY)
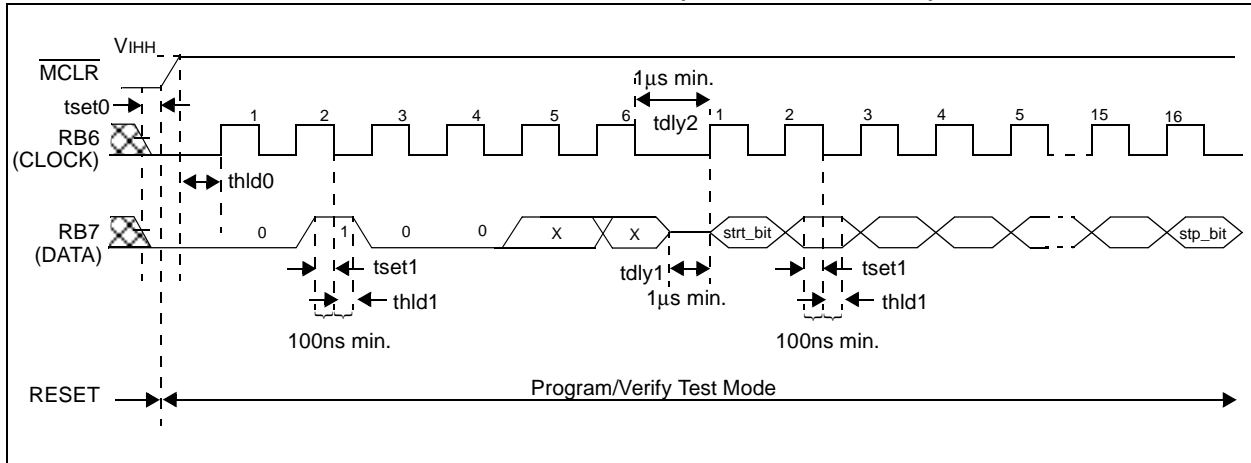
FIGURE 6-2: READ DATA COMMAND $\overline{MCLR}$ = V$_{IHH}$ (PROGRAM/VERIFY)
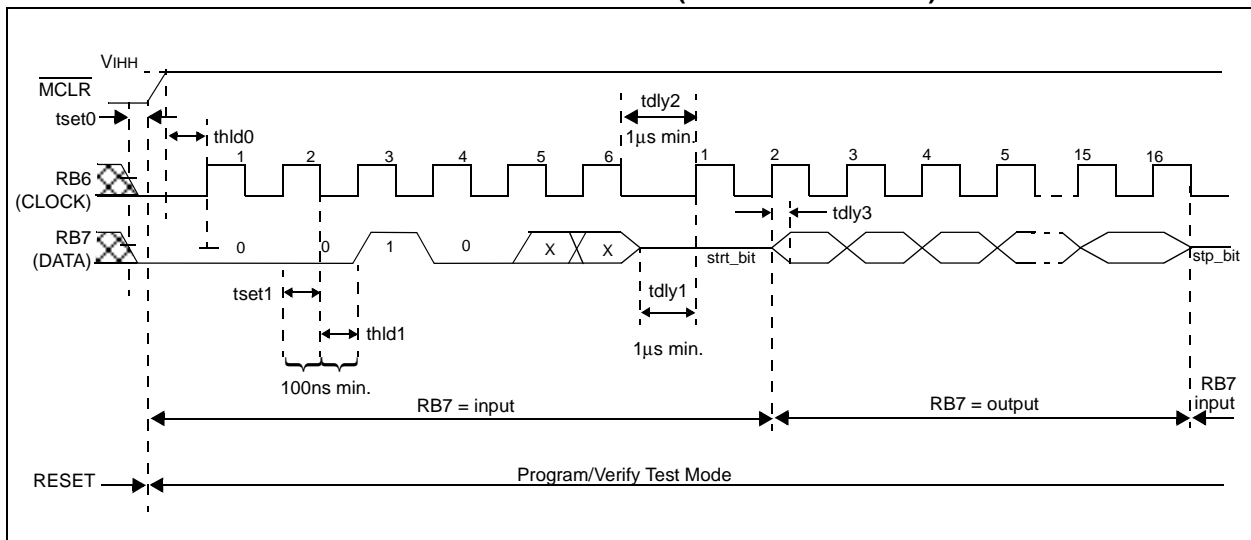
FIGURE 6-3: INCREMENT ADDRESS COMMAND $\overline{MCLR}$ = V$_{IHH}$ (PROGRAM/VERIFY)
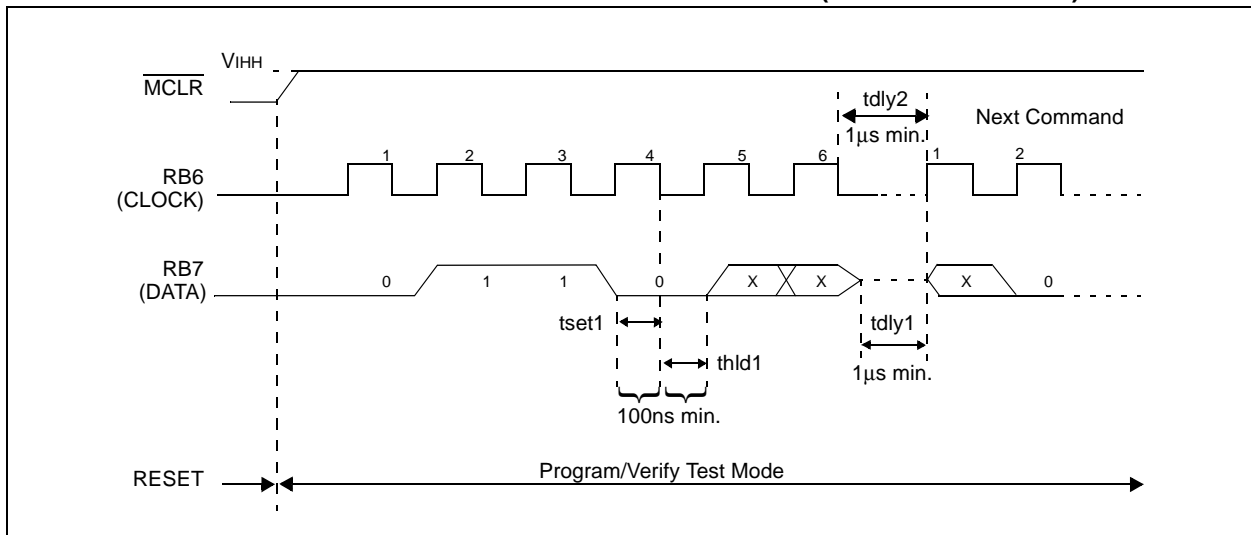
PIC16F87X

FIGURE 6-4: LOAD DATA COMMAND $\overline{\text{MCLR}}$ = VDD (PROGRAM/VERIFY)
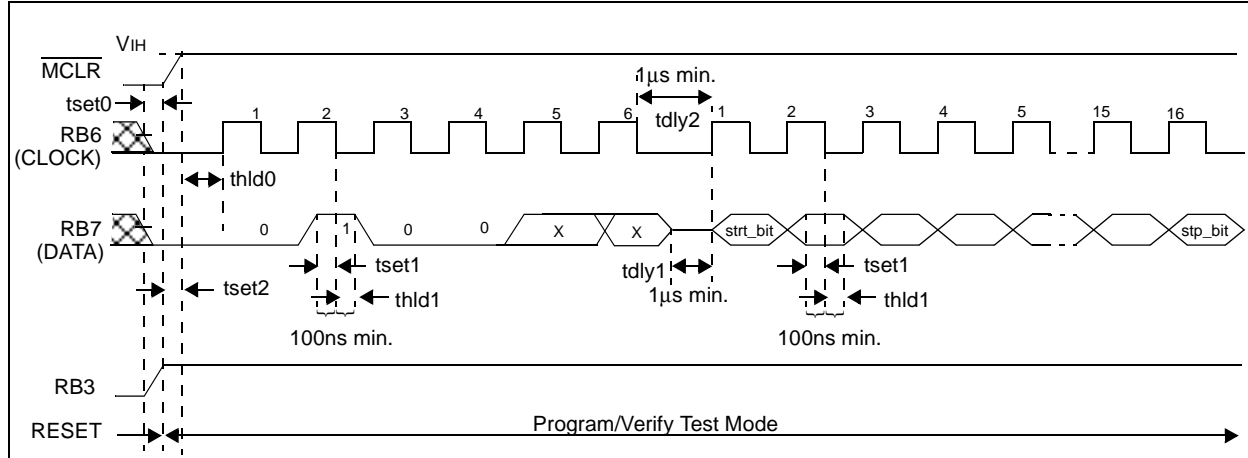
FIGURE 6-5: READ DATA COMMAND $\overline{\text{MCLR}}$ = VDD (PROGRAM/VERIFY)
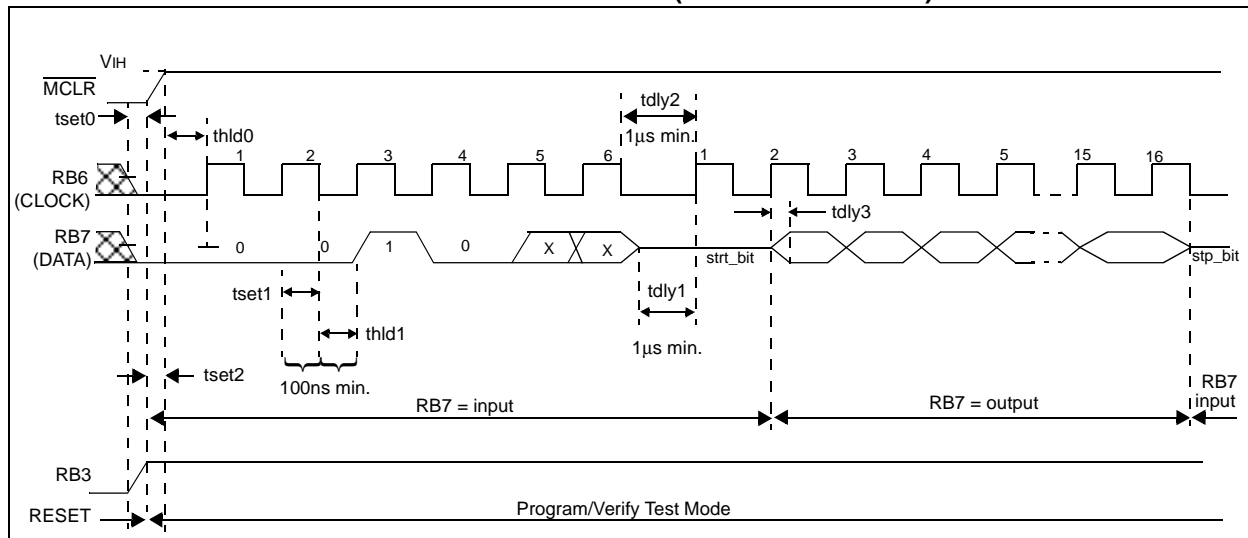
FIGURE 6-6: INCREMENT ADDRESS COMMAND $\overline{\text{MCLR}}$ = VDD (PROGRAM/VERIFY)
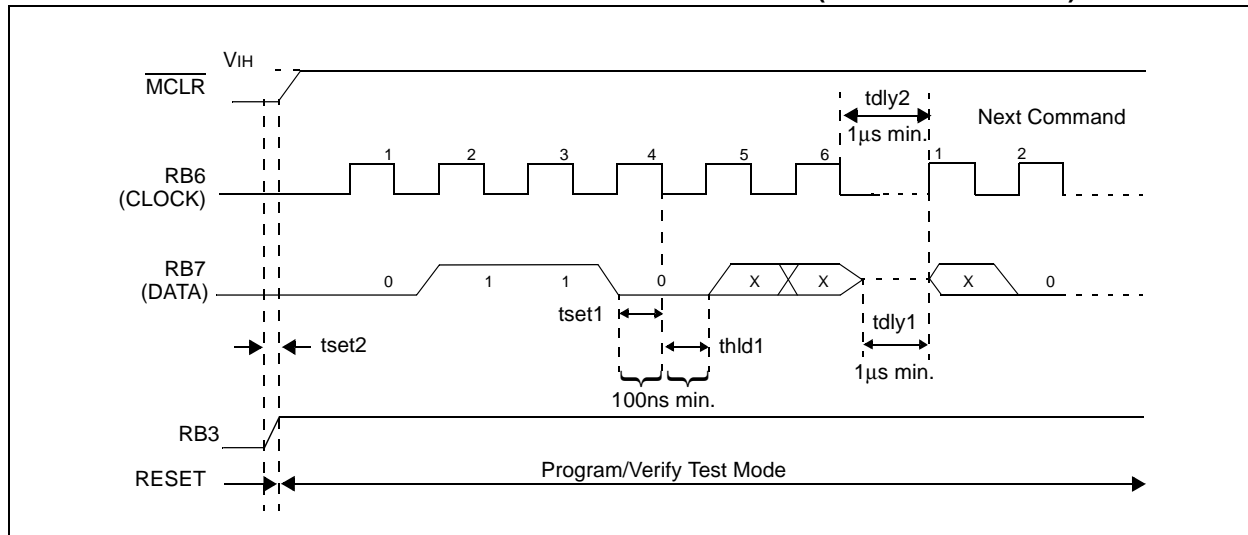
NOTES:

WORLDWIDE SALES AND SERVICE

AMERICAS

Corporate Office
Microchip Technology Inc.
2355 West Chandler Blvd.
Chandler, AZ 85224-6199
Tel: 480-786-7200 Fax: 480-786-7277
Technical Support: 480-786-7627
Web Address: http://www.microchip.com

Atlanta
Microchip Technology Inc.
500 Sugar Mill Road, Suite 200B
Atlanta, GA 30350
Tel: 770-640-0034 Fax: 770-640-0307

Boston
Microchip Technology Inc.
2 LAN Drive, Suite 120
Westford, MA 01886
Tel: 508-480-9990 Fax: 508-480-8575

Chicago
Microchip Technology Inc.
333 Pierce Road, Suite 180
Itasca, IL 60143
Tel: 630-285-0071 Fax: 630-285-0075

Dallas
Microchip Technology Inc.
4570 Westgrove Drive, Suite 160
Addison, TX 75001
Tel: 972-818-7423 Fax: 972-818-2924

Dayton
Microchip Technology Inc.
Two Prestige Place, Suite 150
Miamisburg, OH 45342
Tel: 937-291-1654 Fax: 937-291-9175

Detroit
Microchip Technology Inc.
Tri-Atria Office Building
32255 Northwestern Highway, Suite 190
Farmington Hills, MI 48334
Tel: 248-538-2250 Fax: 248-538-2260

Los Angeles
Microchip Technology Inc.
18201 Von Karman, Suite 1090
Irvine, CA 92612
Tel: 949-263-1888 Fax: 949-263-1338

New York
Microchip Technology Inc.
150 Motor Parkway, Suite 202
Hauppauge, NY 11788
Tel: 631-273-5305 Fax: 631-273-5335

San Jose
Microchip Technology Inc.
2107 North First Street, Suite 590
San Jose, CA 95131
Tel: 408-436-7950 Fax: 408-436-7955

AMERICAS (continued)

Toronto
Microchip Technology Inc.
5925 Airport Road, Suite 200
Mississauga, Ontario L4V 1W1, Canada
Tel: 905-405-6279 Fax: 905-405-6253

ASIA/PACIFIC

China - Beijing
Microchip Technology, Beijing
Unit 915, 6 Chaoyangmen Bei Dajie
Dong Erhuan Road, Dongcheng District
New China Hong Kong Manhattan Building
Beijing, 100027, P.R.C.
Tel: 86-10-85282100 Fax: 86-10-85282104

China - Shanghai
Microchip Technology
Unit B701, Far East International Plaza,
No. 317, Xianxia Road
Shanghai, 200051, P.R.C.
Tel: 86-21-6275-5700 Fax: 86-21-6275-5060

Hong Kong
Microchip Asia Pacific
Unit 2101, Tower 2
Metroplaza
223 Hing Fong Road
Kwai Fong, N.T., Hong Kong
Tel: 852-2-401-1200 Fax: 852-2-401-3431

India
Microchip Technology Inc.
India Liaison Office
Divyasree Chambers
I Floor, Wing A (A3/A4)
No. 11, O'Shaugnessey Road
Bangalore, 560 027, India
Tel: 91-80-207-2165 Fax: 91-80-207-2171

Japan
Microchip Technology Intl. Inc.
Benex S-1 6F
3-18-20, Shinyokohama
Kohoku-Ku, Yokohama-shi
Kanagawa, 222-0033, Japan
Tel: 81-45-471- 6166 Fax: 81-45-471-6122

Korea
Microchip Technology Korea
168-1, Youngbo Bldg. 3 Floor
Samsung-Dong, Kangnam-Ku
Seoul, Korea
Tel: 82-2-554-7200 Fax: 82-2-558-5934

ASIA/PACIFIC (continued)

Singapore
Microchip Technology Singapore Pte Ltd.
200 Middle Road
#07-02 Prime Centre
Singapore, 188980
Tel: 65-334-8870 Fax: 65-334-8850

Taiwan
Microchip Technology Taiwan
11F-3, No. 207
Tung Hua North Road
Taipei, 105, Taiwan
Tel: 886-2-2717-7175 Fax: 886-2-2545-0139

EUROPE

Denmark
Microchip Technology Denmark ApS
Regus Business Centre
Lautrup hoj 1-3
Ballerup DK-2750 Denmark
Tel: 45 4420 9895 Fax: 45 4420 9910

France
Arizona Microchip Technology SARL
Parc d'Activite du Moulin de Massy
43 Rue du Saule Trapu
Batiment A - ler Etage
91300 Massy, France
Tel: 33-1-69-53-63-20 Fax: 33-1-69-30-90-79

Germany
Arizona Microchip Technology GmbH
Gustav-Heinemann-Ring 125
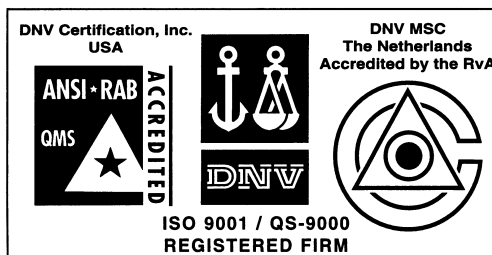D-81739 München, Germany
Tel: 49-89-627-144 0 Fax: 49-89-627-144-44

Italy
Arizona Microchip Technology SRL
Centro Direzionale Colleoni
Palazzo Taurus 1 V. Le Colleoni 1
20041 Agrate Brianza
Milan, Italy
Tel: 39-039-65791-1 Fax: 39-039-6899883

United Kingdom
Arizona Microchip Technology Ltd.
505 Eskdale Road
Winnersh Triangle
Wokingham
Berkshire, England RG41 5TU
Tel: 44 118 921 5858 Fax: 44 118 921-5835

8/01/00

DNV Certification, Inc.
USA
ANSI★RAB
QMS
ACCREDITED
DNV MSC
The Netherlands
Accredited by the RvA
DNV
ISO 9001 / QS-9000
REGISTERED FIRM

Microchip received QS-9000 quality system certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona in July 1999. The Company's quality system processes and procedures are QS-9000 compliant for its PICmicro® 8-bit MCUs, KEELOQ® code hopping devices, Serial EEPROMs and microperipheral products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001 certified.